

Lekkasjelytter HL 5 Bruksanvisning

1. INTRODUKSJON

HL5 er en hendig lekkasje-lytter med integrert piezo mikrofon og trådløs overføring til hodetelefon. Vennligst les og følg bruksanvisningen nøye.

2. BRUK

Enten følestaven (2), forlengelsesstaven (1) og en magnet (4) kan skrues på instrumentet. Ikke bruk verktøy for å feste følerstavene. Bruk bare håndkraft. (Maks kraft er 100cNm).

Skru på instrumentet ved hjelp av knappen (6). For å skru instrumentet av, hold knappen nede noen sekunder.

Ved å trykke på knappen (6) når instrumentet er i bruk, dempes lydsignalet gradvis.

Ved å trykke ennå en gang på knappen (6) blir lyden overført til hodetelefonene.

Nivået på signalet vil også bli indikert av lysdiodene (LED) som ligger rundt knappen i en halvsirkel (5).

Bruk knappen (8) ved innstilling av filter. (3 innstillinger). Den valgte filterinnstillingen blir indikert i lysdiodene (LED) (7) rett under filter-symbolet.

Venstre: Lav frekvens filter (Brukes som markmikrofon)

Midten: Universal filter innstilling / Bredbånd

Høyre: Høy frekvens filter (brukes sammen med følerstaven)

Hodetelefonene skrues AV og På ved hjelp av bryteren (9). Volumet justeres ved hjelp av bryteren (10).

3. BATTERIER

Når batteriene begynner å bli dårlig, vil lysdiodene for filter (7) begynne å blinke.

Det er fremdeles ca 8 timer brukstid igjen.

Når batteriene skal skiftes, åpnes dekselet (11) bak på instrumentet. Bytte batterier, 2 stk. AA batterier 1,5V. Merk at batteriene settes inn riktig med rett polaritet.

Bytte av batterier i hodetelefonene gjøres ved at dekselet(12) åpnes. Bytt batterier, 2 stk. AAA 1,5V. Til begge enhetene kan oppladbare batterier benyttes.


4. DELE-LISTE

HL 5, Art-no. 820002725
Trådløse hodetelefoner, KF 863, Art-no. 820003337
Følerstav, Art-no. 820002715
Magnet, Art-no. 110-03-0010-001
Forlengelsesstav, VST-2, Art-no. 820003336

5. TILLEGGSTYR

Adapter-set, HL 5
Tripod adapter PAM U-D, Art-no. 820000881
Valve adapter 20 mm, S20, Art-no. 810000357
Valve adapter 42 mm, S42, Art-no. 810000358

Manual HL 5

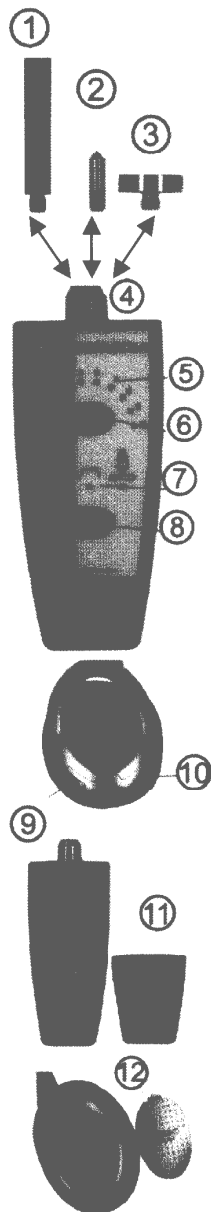

1. Introduction

The HL5 is a handy leak-detection device with integrated piezo microphone and wireless sound-transmission to the headphones. Please read carefully and follow all instructions.

2. Handling

Either a feeler rod[2], or a prolongation stick[1] or a magnet could be hand-screwed to the sensor[4]. Please do not use any tools to screw the accessories to the sensor. (max. torque 100cNm). The HL5 is switched on by pressing button[6]. To switch off hold down this button for some seconds. Pressing shortly on button[6] during operation mutes the sound temporarily (no signal is heard in the headphones, the measured sound-level will be frozen, the LED for filter settings turns off). Press button[6] again for normal measuring mode (sound is transmitted to headphones, level is indicated by LEDs in circle segment[5]).

Use button[8] to switch between 3 different filter-settings. The chosen setting is displayed by the filter-LED[7] right below the filter- symbol.

Left - Usage as ground microphone / low frequencies
Center - universal filter-settings / wide bandwidth
Right - usage as feeler rod microphone / high frequencies

The headphones is switched on and off by switch [9]. Volume is adjusted with controller [10].

3. Batteries

Low batteries are indicated by a flashing filter-LED [7]. Still an operation time of about 8 hours remains.

To change batteries on the HL5 open the cover[11] on the back of the device. Replace the batteries with 2 common cells: AA, 1.5V. Please be careful and make sure to put the batteries with correct polarity into the device.

To change batteries for the headphones open cover[12] and use 2 common AAA, 1.5V cells. For both devices standard rechargeable batteries could be used (not part of delivery).

Scope of delivery:

HL 5, Art.-No. 820002725
Wireless headphones, KF 863, Art.No. 820003337
Feeler rod, Art.-No. 820002715
Magnet, Art.-No. 110-03-0010-001
Prolongation stick VST-2, Art.-No. 820003336

Additional accessoires:

Adaptor-set HL 5
Tripod adaptor PAM U-D, Art.-No. 820000881
Valve adaptor 20mm, S20, Art.-No. 810000357
Valve adaptor 42mm, S42, Art.-No. 810000358)

SebaKMT Vertrieb Dr.-Herbert-lann-Str. 6 96148 Baunach / Germany
Tel. +49 - (0)9544-68-0 Fax +49 - (0)9544-2273
Email: sales@sebakmt.com Internet: www.sebakmt.com
All rights reserved, subject to change without prior notice